

CONTENTS

ASSEMBLY WILL REQUIRE TWO PEOPLE.



FACE PANEL X 1



CHROME LEGS X 3



BASE ASSEMBLY X 1

STAGE 1

LAY THE FACE PANEL DOWN ON A FLAT, DUST-FREE SOFT SURFACE ie Blanket, sheet etc.




INSERT OUTER POLES INTO POLE CONNECTORS AND SECURE BY TIGHTENING GRUBSCREW.

THREAD POWER CABLE THROUGH CENTRE POLE AND CONNECT POLE INTO POLE CONNECTOR AND TIGHTEN GRUB SCREW

STAGE 2

CABLE SLOT

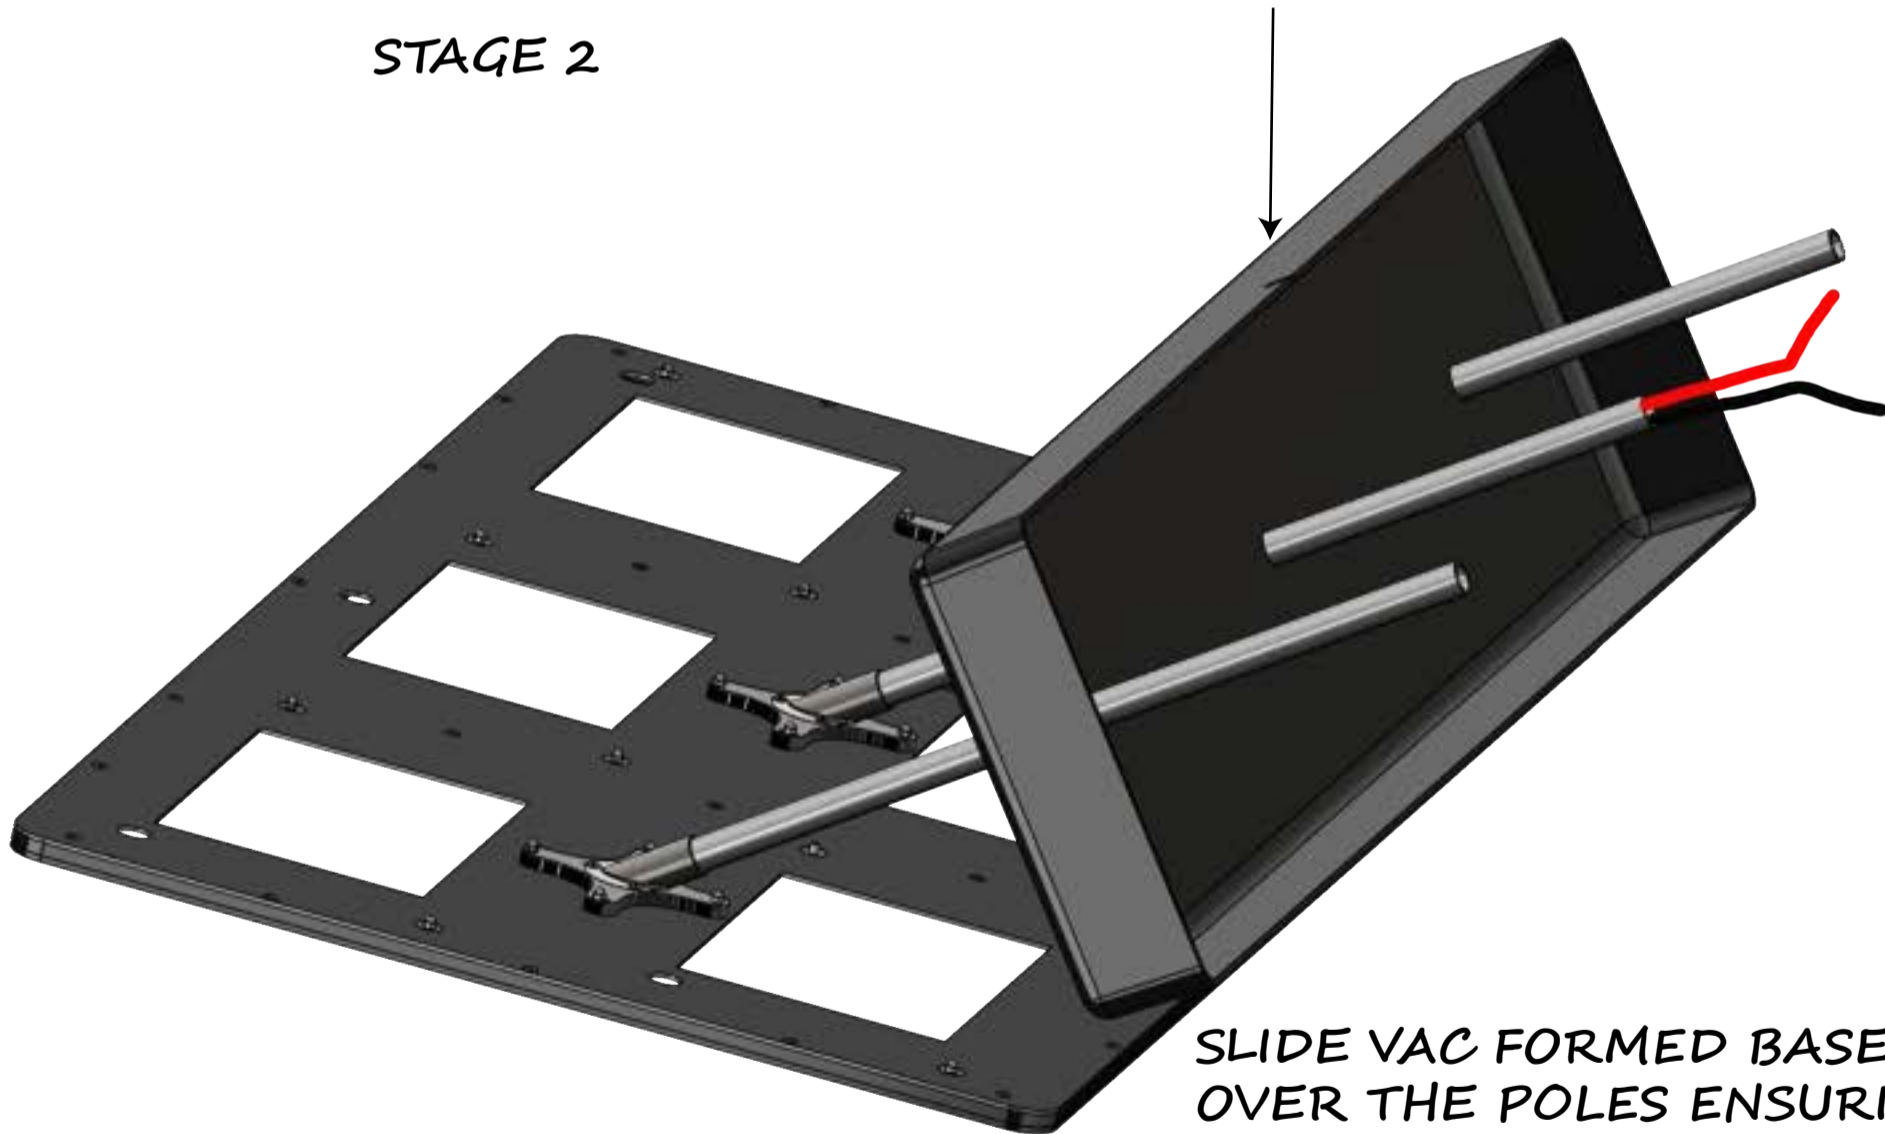


SLIDE VAC FORMED BASE COVER OVER THE POLES ENSURING THE CABLE SLOT IS AT THE REAR.

STAGE 3


THREAD POWER LEAD THROUGH THE CENTRE BASE POLE CONNECTOR.

FIX ALL 3 POLES INTO BASE POLE CONNECTORS AND SECURE WITH GRUB SCREW.

CONNECT POWER CABLE INTO TERMINAL BLOCK.

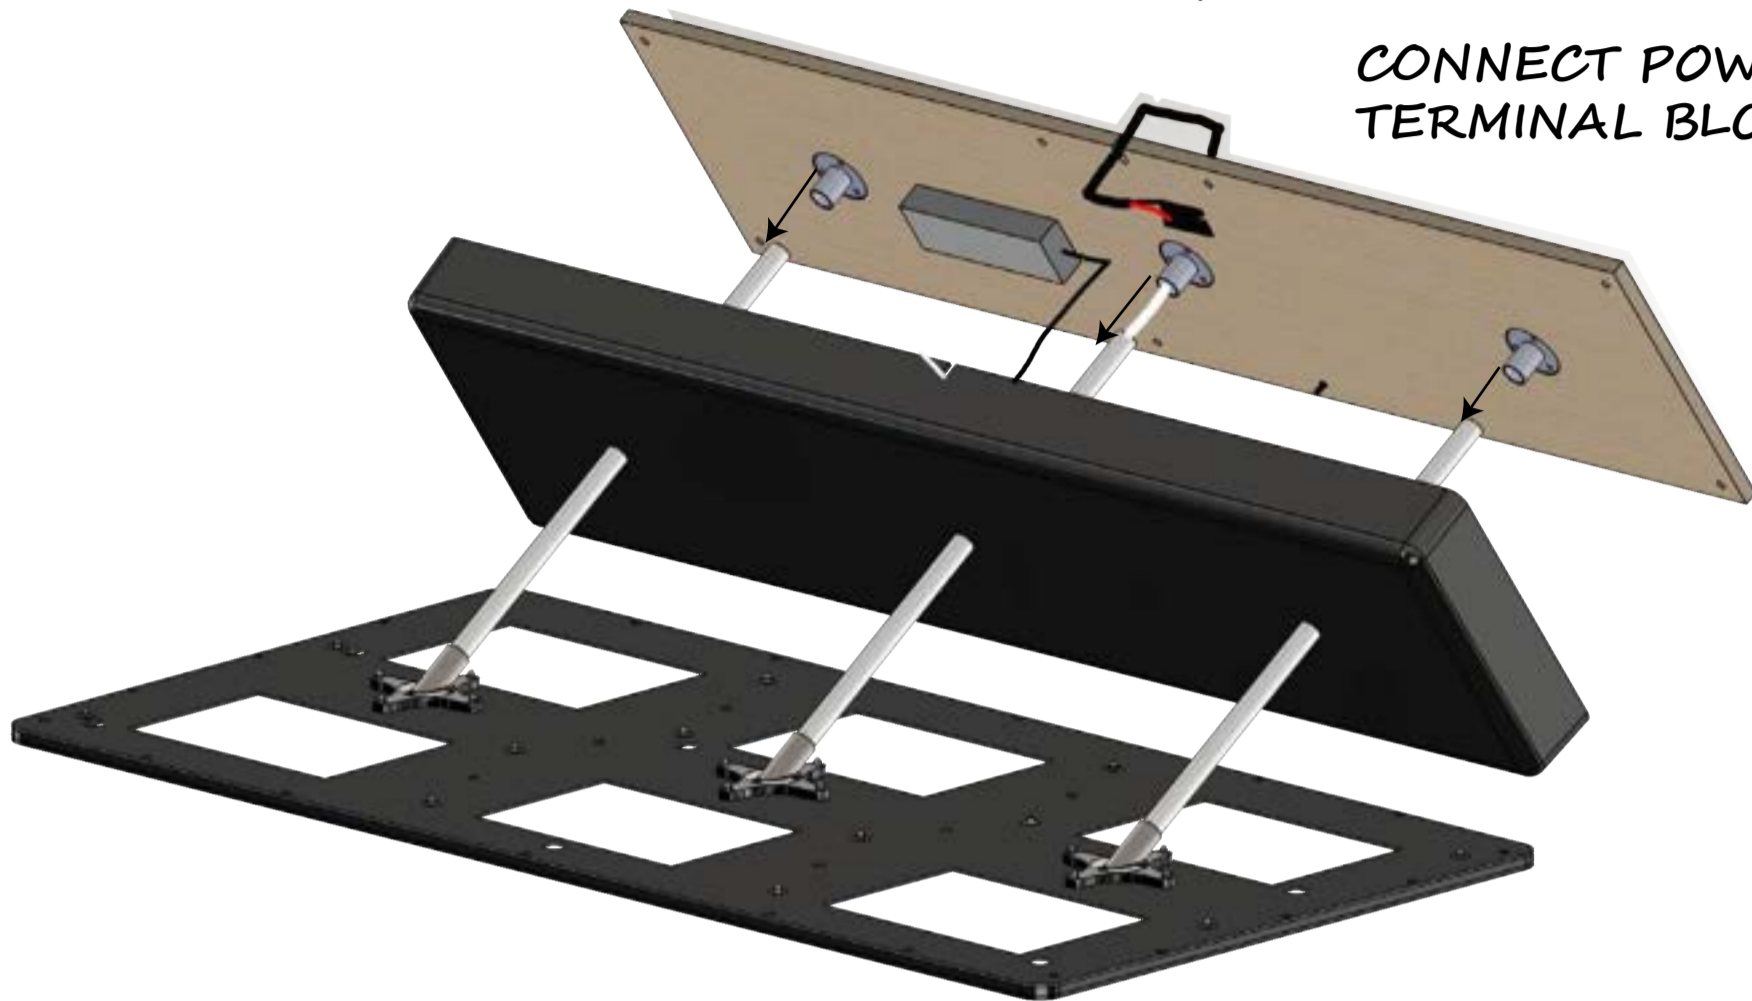

STAGE 4

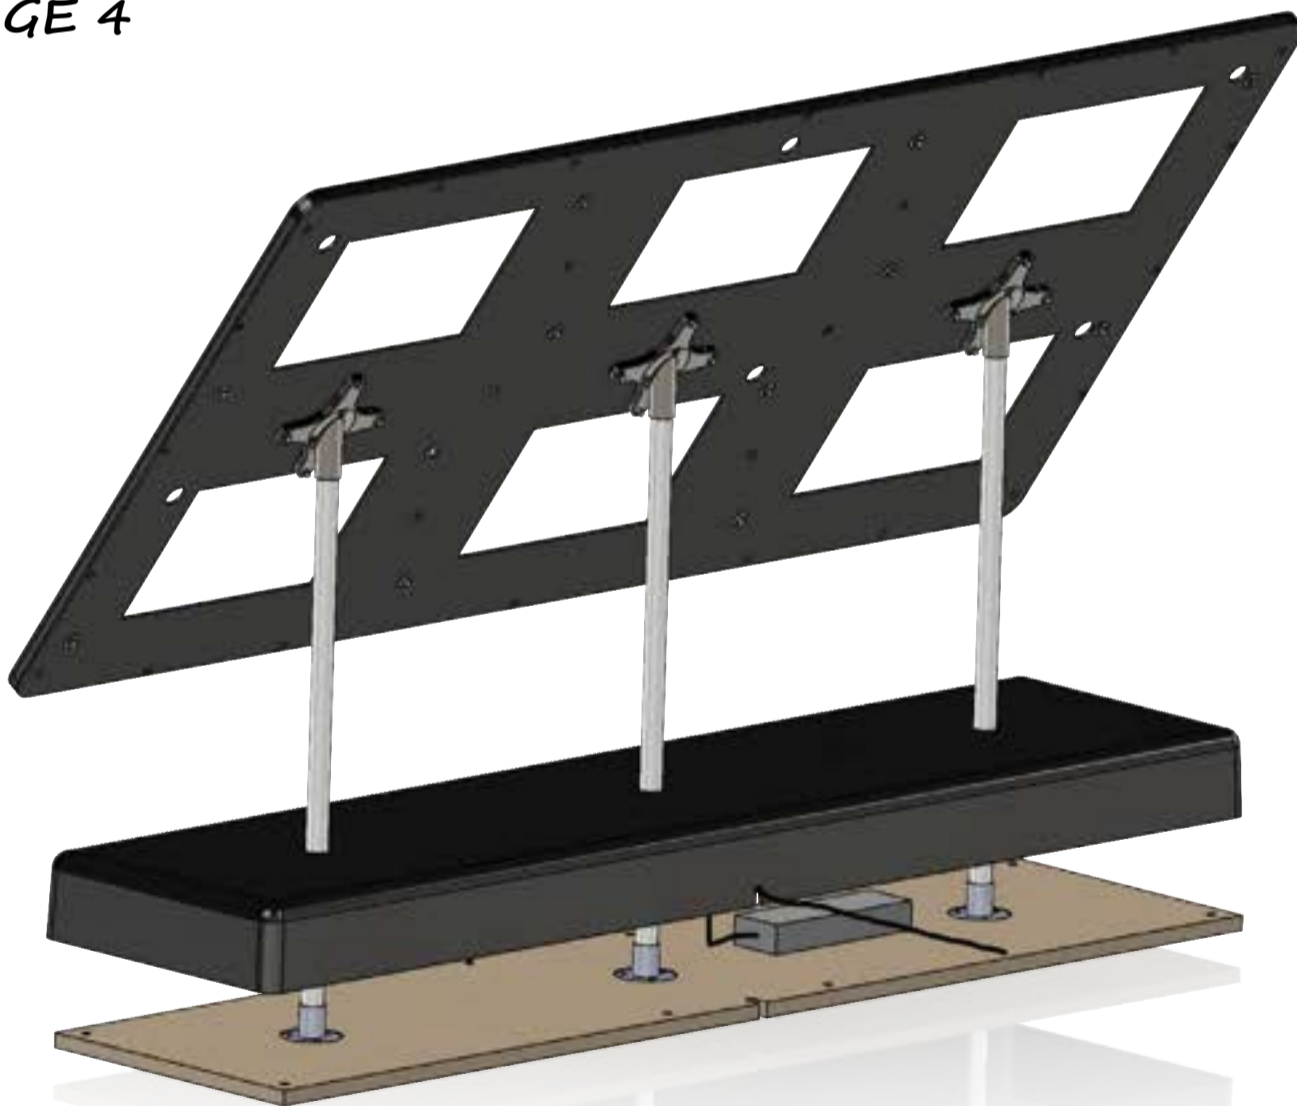

USING 2 PEOPLE.THE UNIT CAN NOW BE LIFTED AND AND STOOD UPRIGHT. ENSURE THE MAINS POWER LEAD IS SLOTTED THROUGH THE SLOT IN THE REAR OF THE VAC FORM COVER. SLIDE THE VAC FORM COVER OVER THE MDF BASE ASSEMBLY.

COMPLETE



www.whitelightdisplay.co.uk