



PLEASE READ BEFORE STARTING

Freestanding Framed Light Panel Installation Instructions

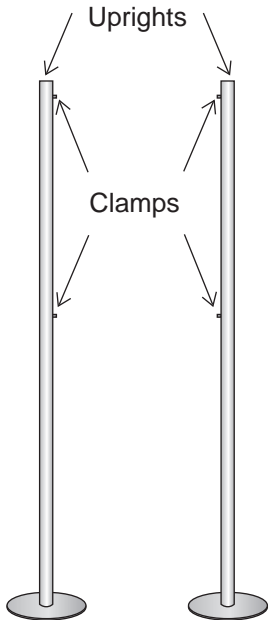

1. The 2 meter uprights have threaded inserts at one end.
2. Attach round feet to this end of the uprights with screws provided.
3. Position the uprights so that the two clamps are facing each other, about the same width apart as the A1 Light Panel.
4. Identify top of Light Panel (the opening for the graphics is at the top and the wire comes out of the bottom).
5. 1 Person to lift the Light Panel up and align the cut outs to the jaws of the clamps on the upright.

Clamps align onto cut outs of Light Panel

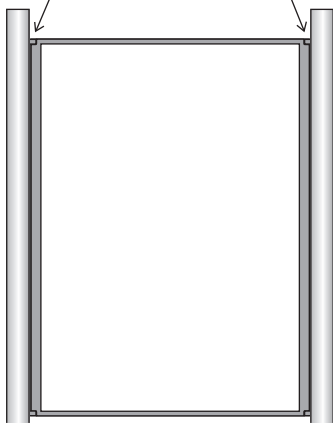

6. Tighten clamps onto the Light Panel with the allen key provided.
7. Whilst the Light Panel is still being held, move the second upright into place and repeat the process.
8. There are 3 cross bars provided, lower the top cross bar into position by sliding jaws into slots on each upright. Ensure that the screws in the cross bar are on the same side as the clamps (This is the back).
DO NOT OVER TIGHTEN

9. Fit the middle cross bar at the bottom of the legs and slide up until it reaches the bottom of the Light Panel. Make sure that the power lead is in the channel of the cross bar prior to tightening into position.
10. Loop power lead over cross bar and insert into vertical channel of leg.
11. Fit plastic infill, trapping power lead behind it.
12. Fit lower cross bar, lift up until it reaches infill and tighten.
13. Load Graphics by gently opening the pocket at the top and slide in.
14. Connect the transformer and enjoy!

Slide Cross bars into uprights and tighten

